


Radius Construction

No block modifications are required for concave radius construction. Planning will be needed to prevent gapping as radii will increase with wall height.

NOTE: Radii shown and referenced are measured at the top of the wall. Radii at the bottom of the wall will be smaller due to block setback.

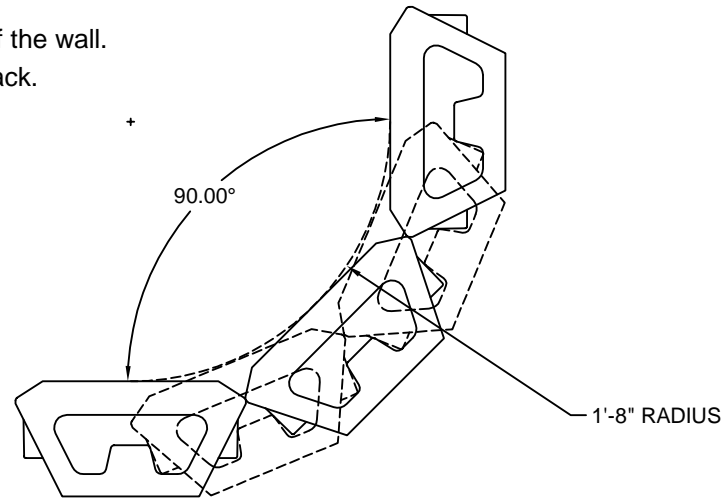

This drawing contains proprietary information and confidential information and shall not be used, copied or disclosed without written permission from RidgeRock Retaining Walls Inc. Protected under U.S. and foreign copyright and patent law. All rights reserved.



RidgeRock
Retaining Walls, LLC
P.O. Box 241233
Charlotte, NC 28224
704-504-3358
Fax: 504-3038

PRODUCT:

RIDGEROCK II CONCAVE RADIUS

DRAWING SET:

RIDGEROCK II UNIT DETAILS

REVISION DATE:

9.11.23

UNITS:

Inches

SHEET #:

1 of 1

DRAWING NAME:

RRII radius.dwg